




SQUARE GUTTER KIT SUNROOM 12

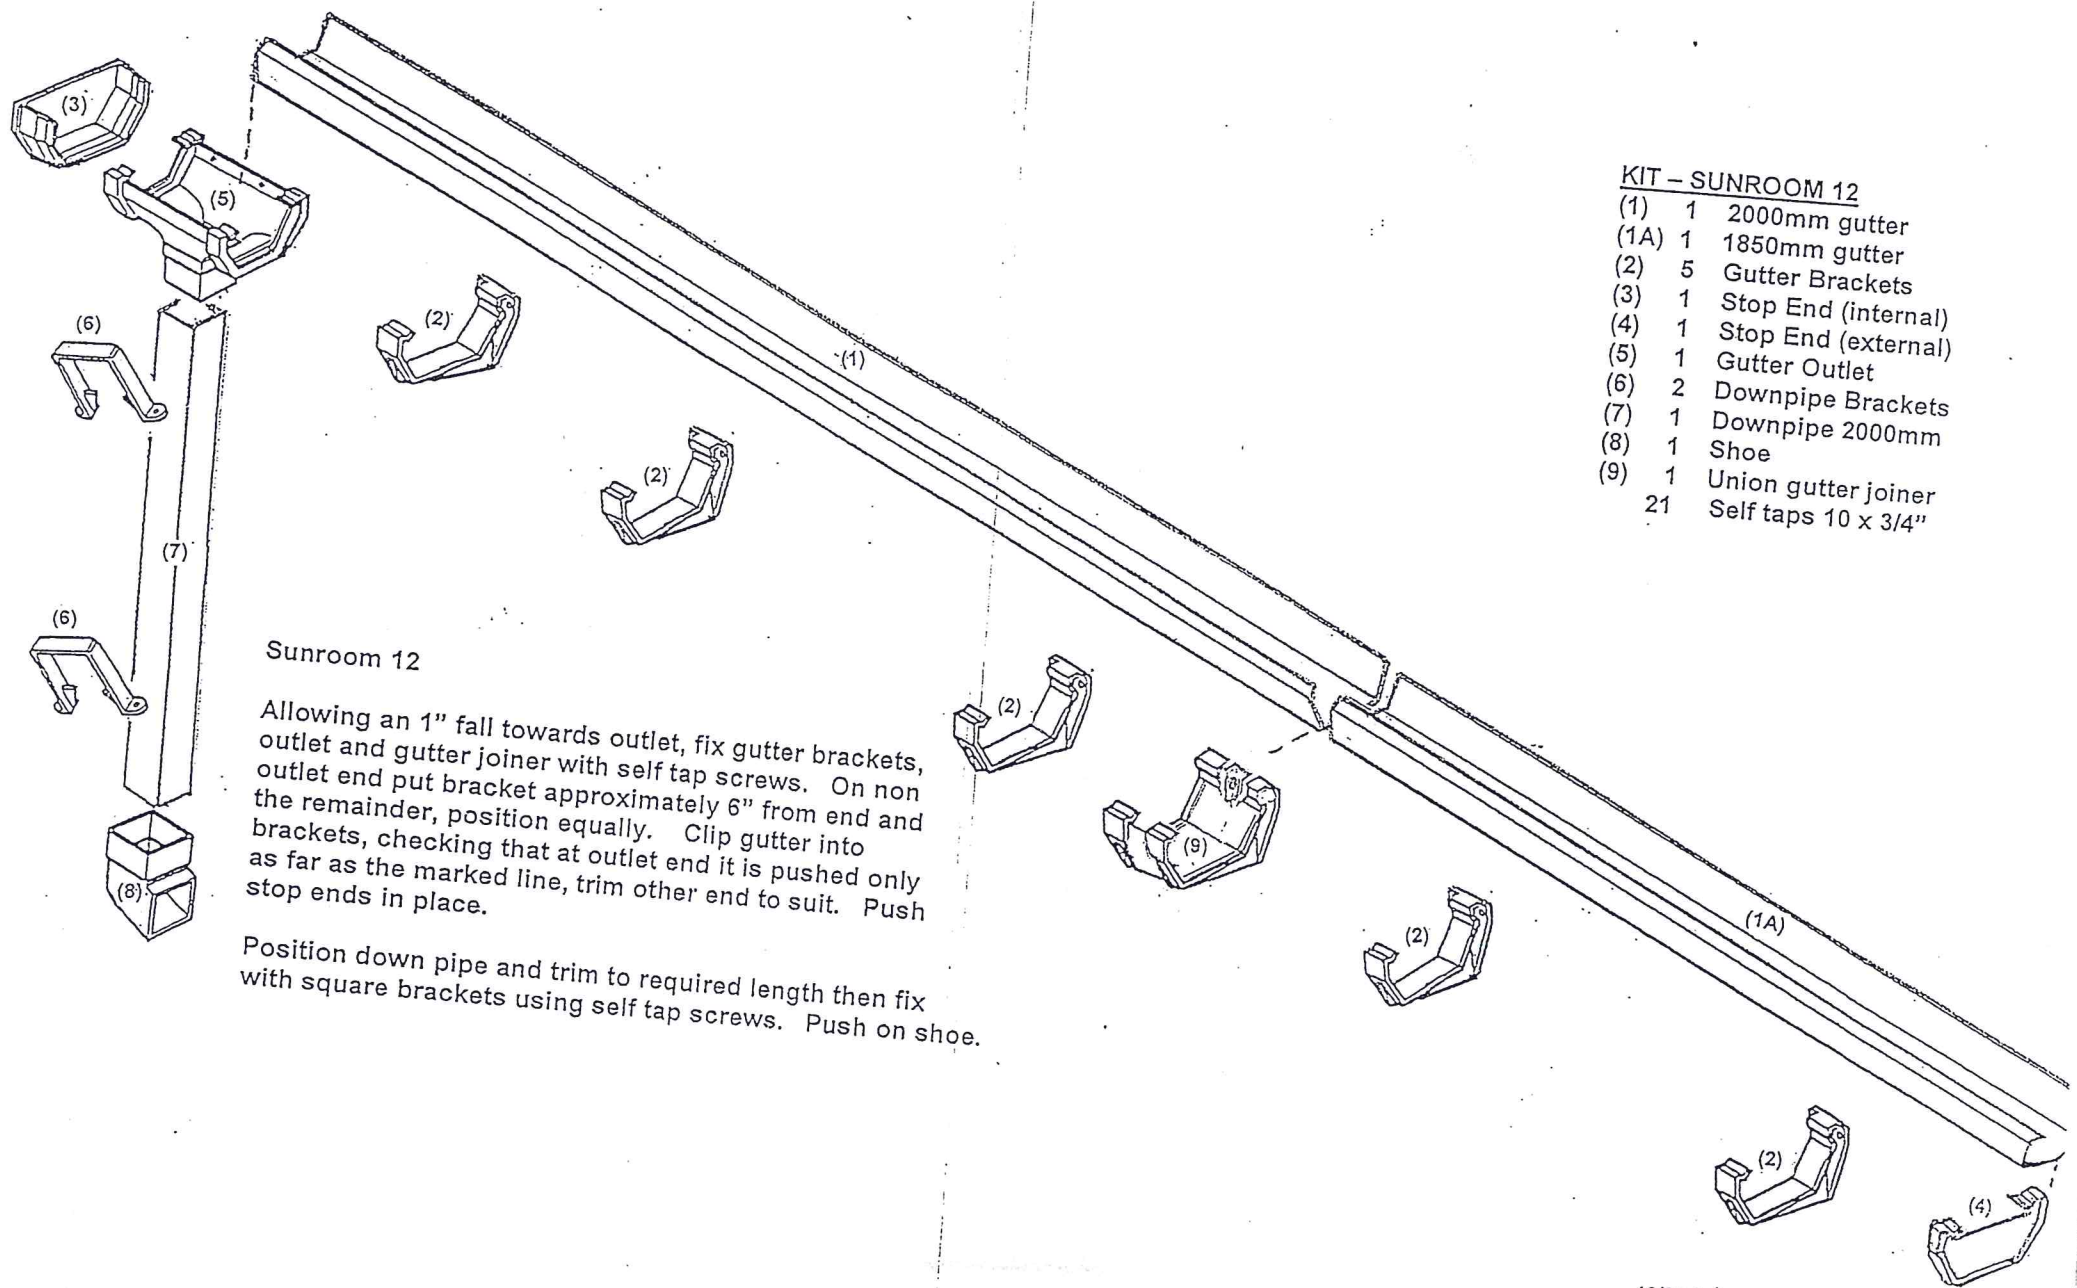

- KIT - SUNROOM 12**
- (1) 1 2000mm gutter
 - (1A) 1 1850mm gutter
 - (2) 5 Gutter Brackets
 - (3) 1 Stop End (internal)
 - (4) 1 Stop End (external)
 - (5) 1 Gutter Outlet
 - (6) 2 Downpipe Brackets
 - (7) 1 Downpipe 2000mm
 - (8) 1 Shoe
 - (9) 1 Union gutter joiner
 - 21 Self taps 10 x 3/4"

Sunroom 12

Allowing an 1" fall towards outlet, fix gutter brackets, outlet and gutter joiner with self tap screws. On non outlet end put bracket approximately 6" from end and the remainder, position equally. Clip gutter into brackets, checking that at outlet end it is pushed only as far as the marked line, trim other end to suit. Push stop ends in place.

Position down pipe and trim to required length then fix with square brackets using self tap screws. Push on shoe.