




SQUARE GUTTER KIT SUNROOM 8

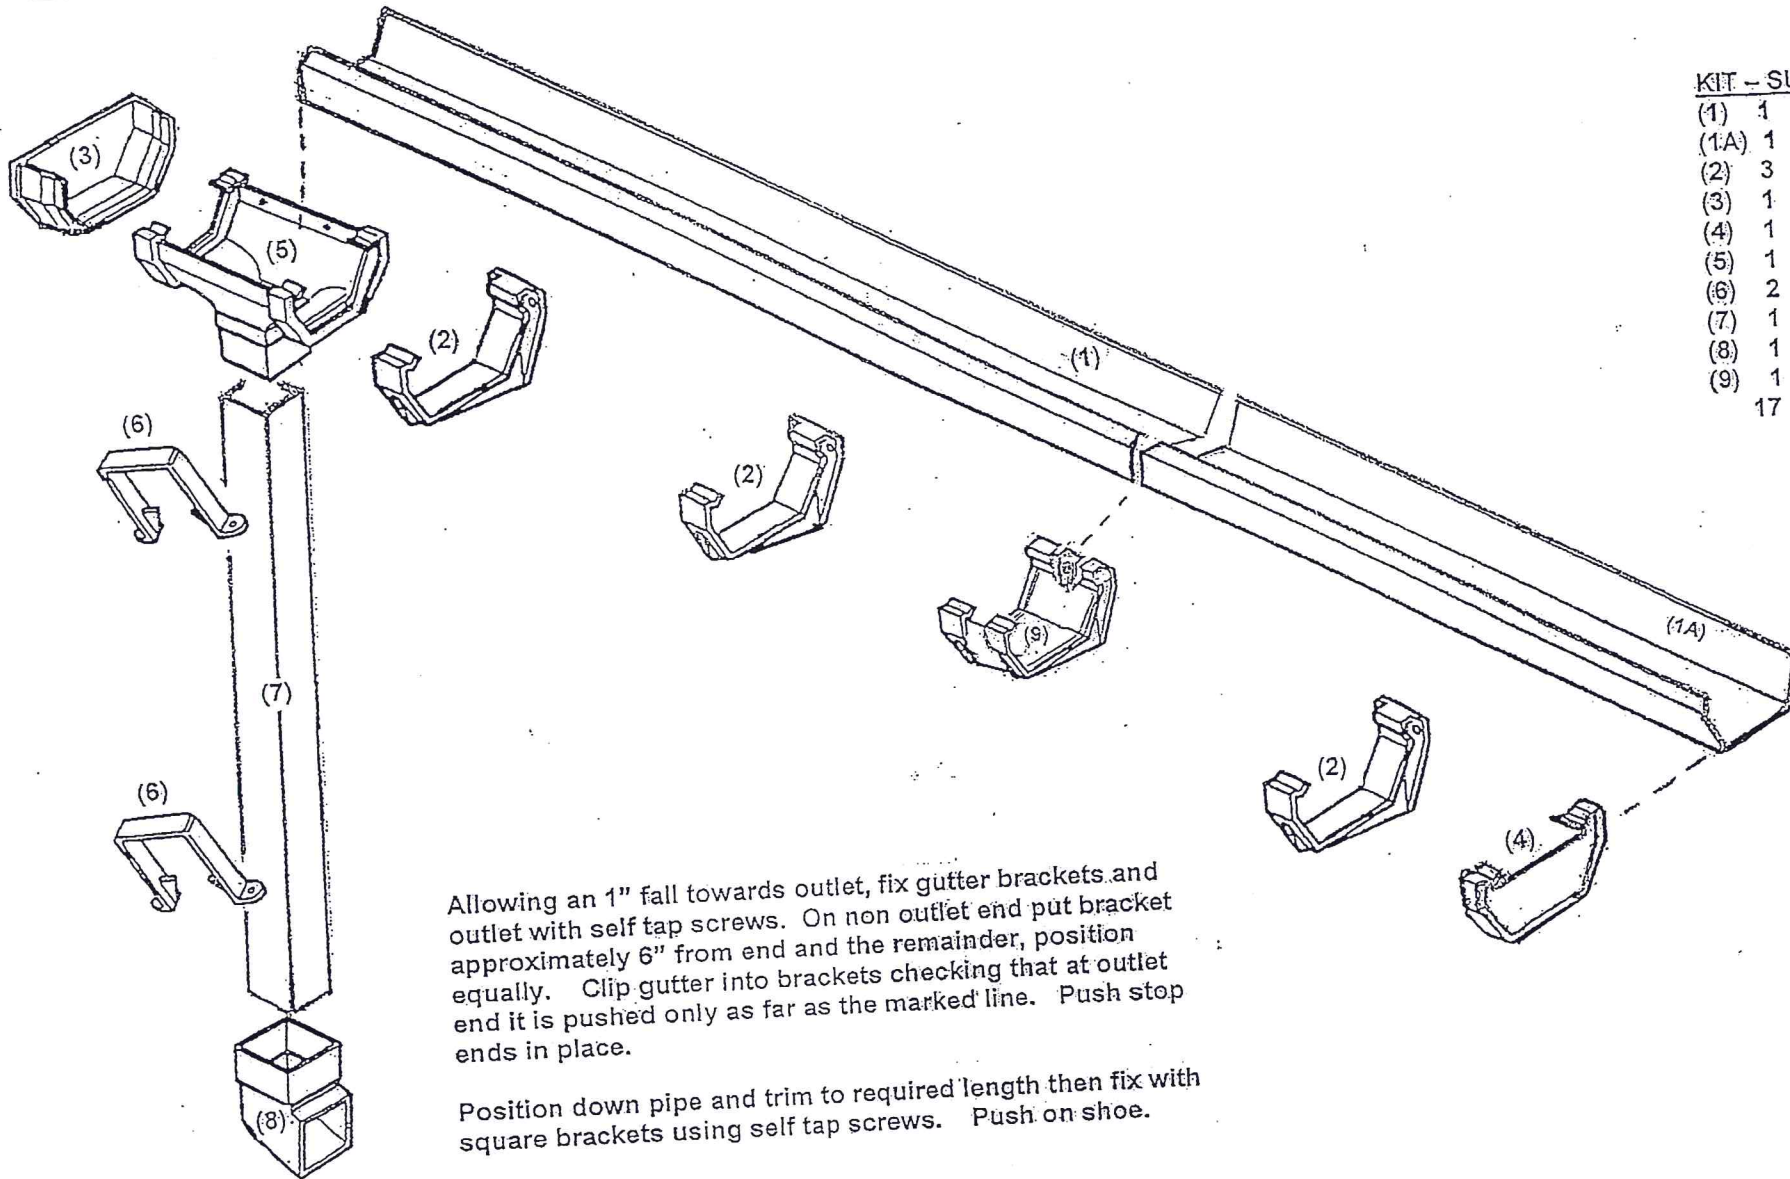

- KIT - SUNROOM 8**
- (1) 1 2000mm gutter
 - (1A) 1 395mm gutter
 - (2) 3 Gutter Brackets
 - (3) 1 Stop End (internal)
 - (4) 1 Stop End (external)
 - (5) 1 Gutter Outlet
 - (6) 2 Downpipe Brackets
 - (7) 1 Downpipe 2000mm
 - (8) 1 Shoe
 - (9) 1 Union Gutter Joiner
 - 17 Self taps 10 x 3/4 "

Allowing an 1" fall towards outlet, fix gutter brackets and outlet with self tap screws. On non outlet end put bracket approximately 6" from end and the remainder, position equally. Clip gutter into brackets checking that at outlet end it is pushed only as far as the marked line. Push stop ends in place.

Position down pipe and trim to required length then fix with square brackets using self tap screws. Push on shoe.