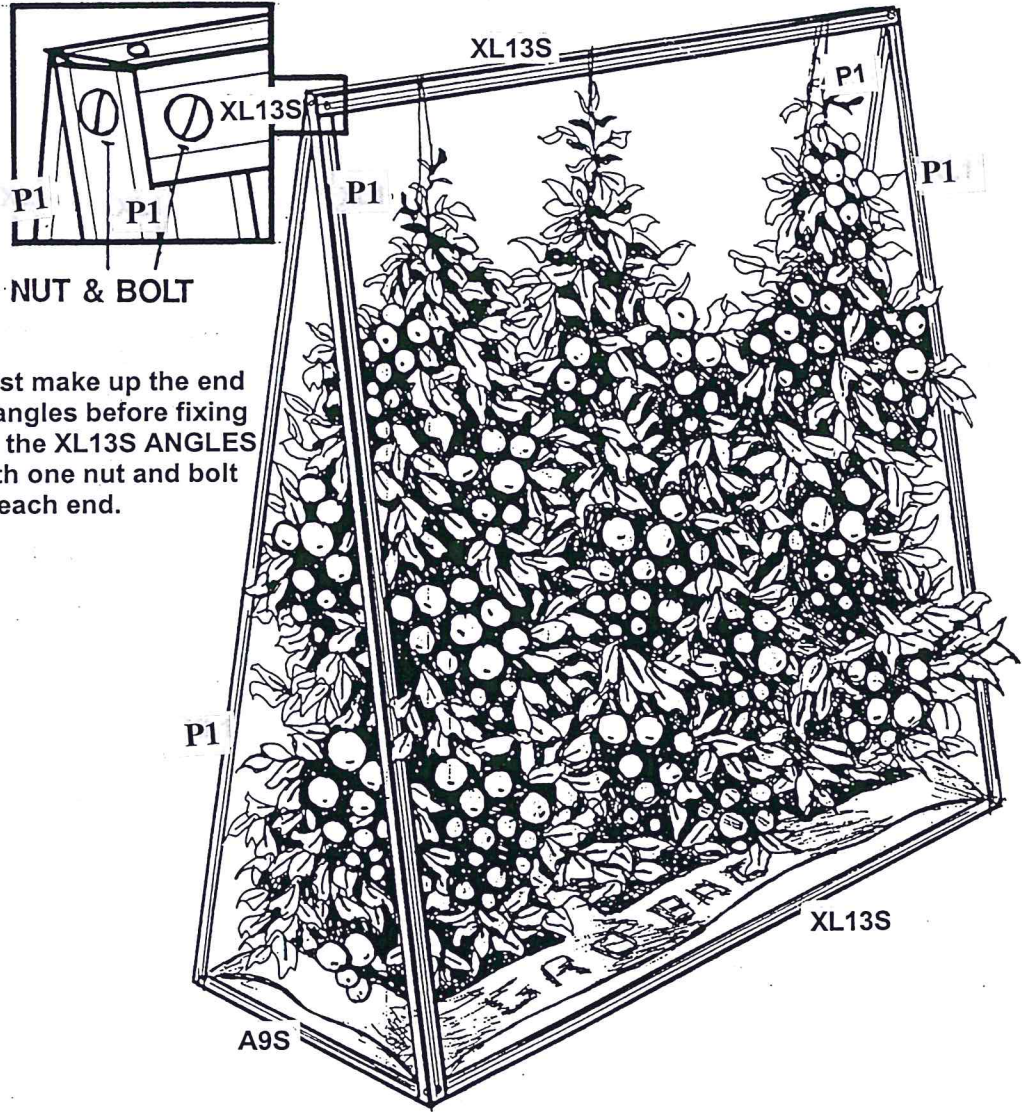







PLANT SUPPORT ASSEMBLY INSTRUCTIONS

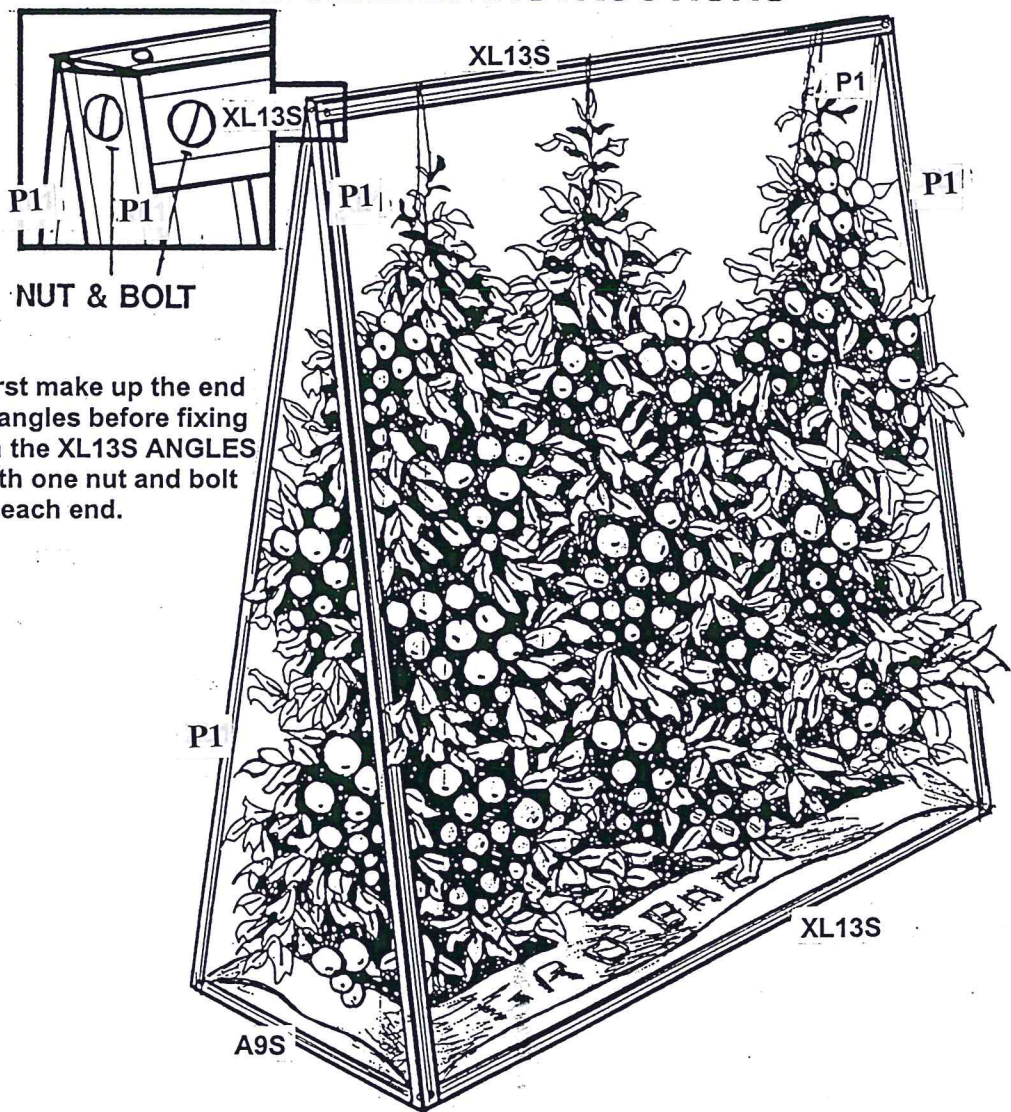


First make up the end triangles before fixing on the XL13S ANGLES with one nut and bolt at each end.

PARTS LIST






P1		90° ANGLE	4
A9S		90° ANGLE	2
XL13S		90° ANGLE	3
		8mm Steel Bolts	12
		M4 Steel Nut	12

PLANT SUPPORT ASSEMBLY INSTRUCTIONS



First make up the end triangles before fixing on the XL13S ANGLES with one nut and bolt at each end.

PARTS LIST

P1		90° ANGLE	4
A9S		90° ANGLE	2
XL13S		90° ANGLE	3
		8mm Steel Bolts	12
		M4 Steel Nut	12