

SUNROOM WINDOW KIT

1. From Inside Structure align plastic AB2 angle flush with window ledge. (RLD9) and on under edge drill through four holes in AB2 with 3mm Drill Bit into RLD9, Fix with 4-3/4 flanged screws. (FIG 1)

Position draft excluder along ledge, and up to line of plastic angle AB2

2. Position unit, adjusting to sit evenly and level before fixing hinge to RLD6/7 in 6 places using 1" self tap screws holding the hinge to window. (FIG 2)

Close window and carefully locate and mark where the four posts are to be positioned on ledge, so that on closure the stay holes and posts match





NOTE: that the two inner posts are tensioned at closure. (FIG 3)

Using 4mm Drill Bit provided, drill 8 holes and fix posts with M4x8 nuts and bolts. (nuts on underside)


3. If your window is fitted on the side or the front without a gutter kit, fit AN6 weather board to RLD6/7 above hinge, hold AN6 level and drill through 3 holes into RLD6/7 with 3mm Drill Bit, fix with 3-3/4 self taps. (FIG 4)

4. Silicone window glazing the same as rest of sunroom, and apply a bead of silicon on top edge of AN6 where fitted.


NOTE: This window can be placed in any bay.
If you have a gutter fitted make sure window will not foul gutter down pipe or gutter brackets

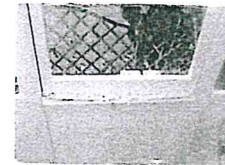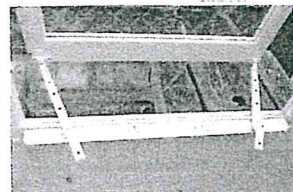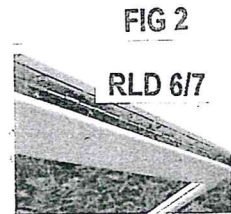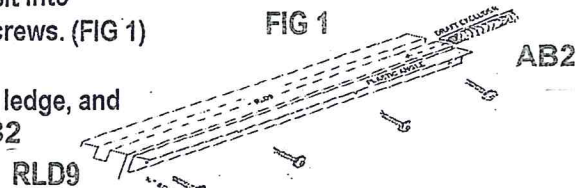

SIDE VIEW WITHOUT GUTTER

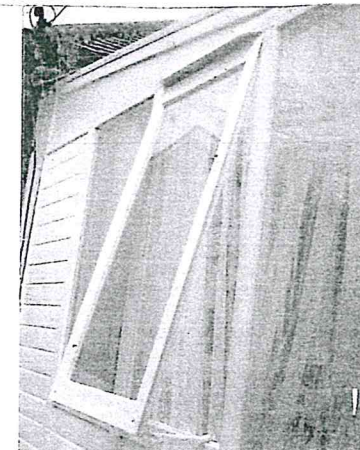

FRONT VIEW WITH GUTTER

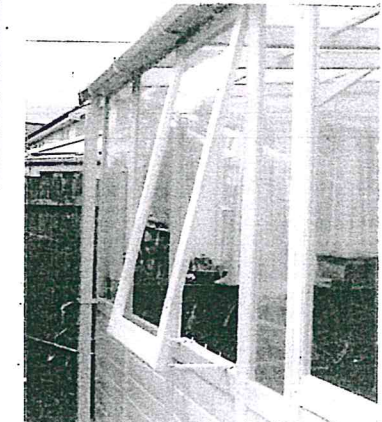

PARTS LIST

- Pre-assembled window with hinge & 2 stays
- 1 X Plastic Angle AB2
- 4 X Posts
- 6 x No: 6 x 1" self taps
- 8 x M4 x 8 bolts & nuts
- 7 x No: 10 x 3/4" flanged pozi self taps
- 1 x Draft excluder
- 1 x Weather Board AN6
- 1 x 4mm Drill Bit
- 1 x 3mm Drill Bit

NOTE : We recommend two people to fit this window.

NOTE: Use Eye Protection & Gloves to fit window kit to an already built sunroom REMOVE GLAZING AS FOLLOWS:

1. Choose bay to fit window
2. Cut silicone with sharp knife around glazing edge.
3. Drill a hole approx 8mm about 50mm in from bottom corner & top corner (NOTE: Press firm on drill so that glazing cracks) you may have to do this 3 or 4 times, Tap glazing & lift out in large pieces.
4. Clean up all silicone from around edge with sharp knife
5. Fit window in same way
6. If you are using AN6 weather board, you may have to remove a plastic plug in RLD6/7, then fit AN6 in same way.